

NOTUS 16 STATUS DOUBLE SATIN LINEAR LED

INSTALLATION INSTRUCTIONS FOR LUMINAIRE NOTUS 16 STATUS DOUBLE SATIN LINEAR LED

1 Cut the hole

•Notice ceiling depth > 90mm

2 Remove cover

Remove the Linear LED profile to make wiring connections. Follow the instructions for **handling linear LED modules**.

3 Installation

Make wiring operations (i) Insert the luminaire in the ceiling. Rotate the fixture 90°.

(i) Wiring operations.

4 Secure the fitting on ceiling with two (2) screws

5 After installing the fitting, use filling material to fill the gaps on ceiling. Then, paint the ceiling.

6

Close fixture
Fit the Linear LED profile and the opal cover
Follow the instructions for handling linear LED modules.

USER INSTRUCTIONS



- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer

Last updated: April 2016


HANDLING LINEAR LED MODULES

INSTRUCTIONS

A Remove the screws along the linear led profile.

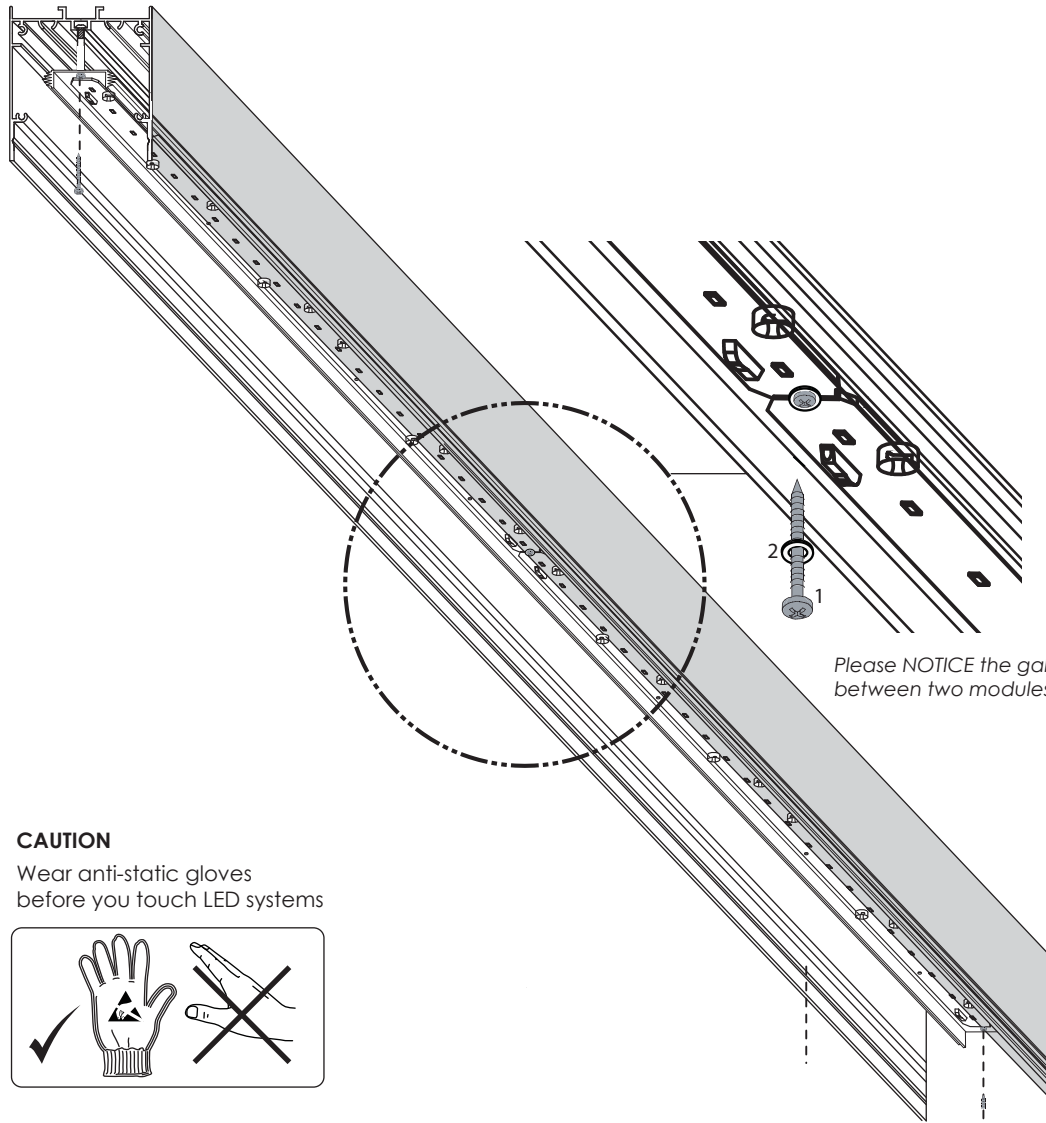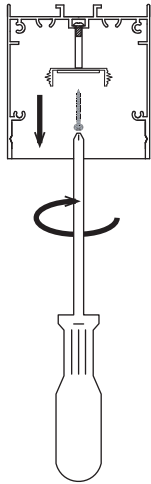


B Linear Led profile is secured on the lighting fixture with a security wire.

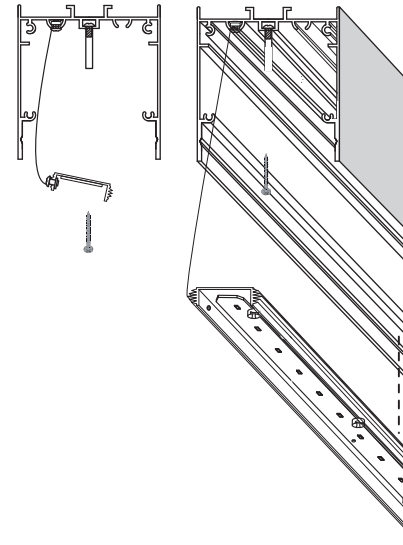

CAUTION

Wear anti-static gloves before you touch LED systems

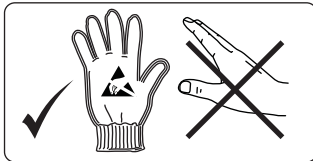

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.



Last updated: January 2016