

(a) indoor/wall/reading light

 






3 Rotate and focus.




 




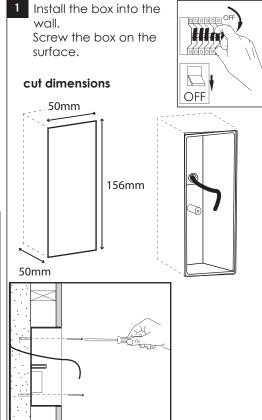

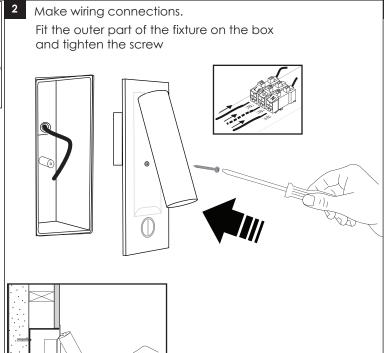

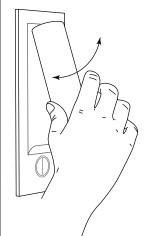



## **USER INSTRUCTIONS**

- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- •Ensure that the mains is switched off during servicing.
- •Do not use bulb(s) bigger than the indicated on units name-plate or packaging.

70

- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- •Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- •The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- •LED modules are replaced only by the manufacturer.

## CAUTION

Wear anti-static gloves before you touch LED systems





## Factory

5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230 E-mail: info@bright.gr | www.bright.gr











