
LEGATUS POTIS N S.S.LED

ΙΟΥΛ 2024


οδηγίες τοποθέτησης


εσωτερικού χώρου / ράγας χαμηλής τάσης

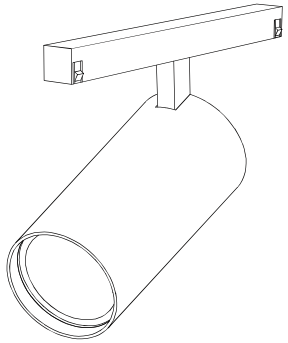


1 **Εγκατάσταση**

Τοποθετήστε το φωτιστικό στη ράγα.

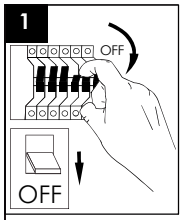


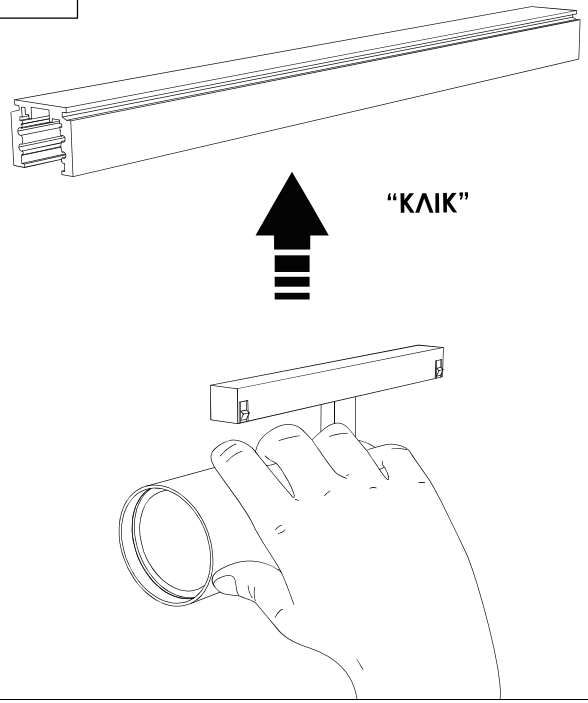


2 **Περιστροφή**

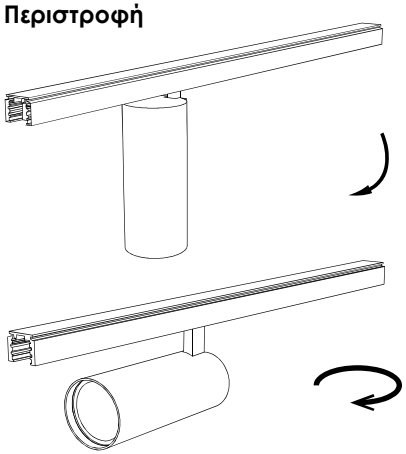

3

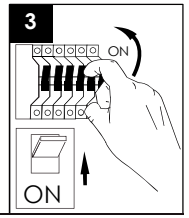

4 **Αφαίρεση από τη ράγα**

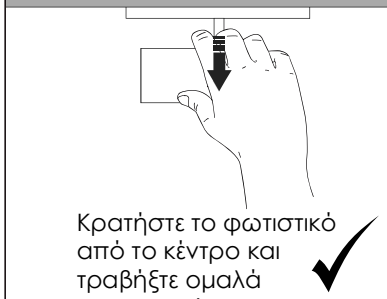



Οδηγίες εγκατάστασης

- Η εγκατάσταση του φωτιστικού σώματος πρέπει να γίνει από αδειούχο ηλεκτρολόγο εγκαταστάτη ή τεχνικό με γνώση του ισχύοντος κανονισμού εσωτερικών ηλεκτρικών εγκαταστάσεων.
- Εφόσον το φωτιστικό είναι εφοδιασμένο με ακροδέκτη γειώσεως, να γίνει σύνδεση με την γείωση της εγκατάστασης.
- Κατά την αλλαγή του λαμπτήρα ή κατά τον καθαρισμό του φωτιστικού πρέπει να λαμβάνεται μέριμνα ώστε το φωτιστικό να μην είναι υπό τάση.
- Η ισχύς των λαμπτήρων δεν πρέπει να είναι μεγαλύτερη της αναγραφόμενης στην πινακίδα του φωτιστικού ή στην ετικέτα της συσκευασίας.
- Μετά την τοποθέτηση βεβαιωθείτε ότι το φωτιστικό είναι επαρκώς στερεωμένο και οι στυπιοθλίπτες των καλωδίων, όπου υπάρχουν, είναι σφιγμένοι μέχρι το τέλος της διαδρομής τους.
- Ο κατασκευαστής δεν φέρει καμία ευθύνη για τραυματισμούς ή βλάβες που προέρχονται από λανθασμένη τοποθέτηση ή χρήση.
- Δεν προορίζεται για βρογχοειδή σύνδεση.
- Βίδες, ούπα και κλέμες δεν συμπεριλαμβάνονται στο φωτιστικό.
- Τα στοιχεία LED αντικαθίστανται μόνο από τον κατασκευαστή.

BRIGHT ΕΙΔΙΚΟΣ ΦΩΤΙΣΜΟΣ

Εργοστάσιο
Κεφαλοβρύσου 5, Μονομάτι, Αχαρνές, Τ.Κ. 13677, Αθήνα, Ελλάδα
Τηλ: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr


GREENLIGHT

LEGATUS POTIS N S.S.LED

JAN 2024


installation instructions


indoor / low voltage systems

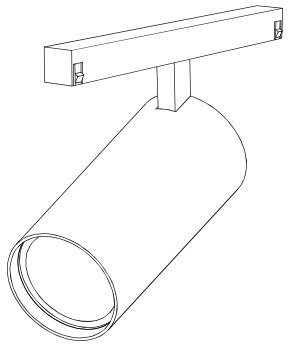


1 **Install the adapter**

Fit the adapter on track.

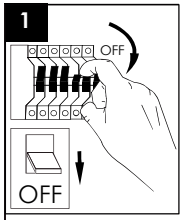


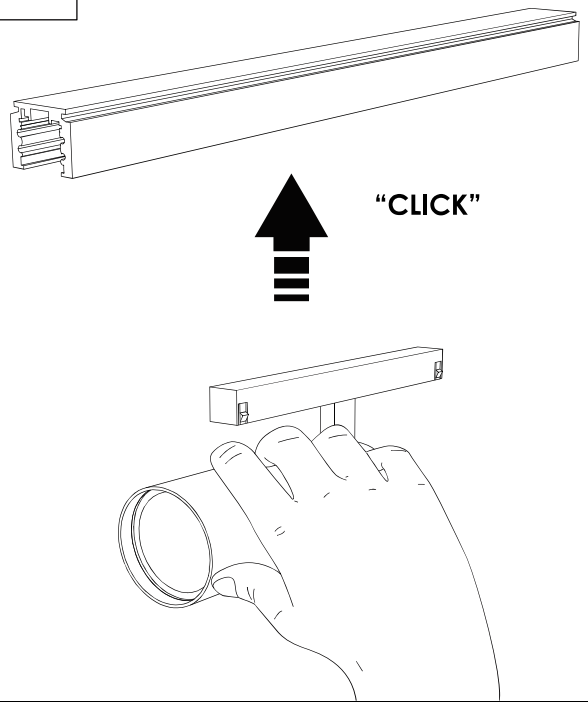


2 **Rotation**

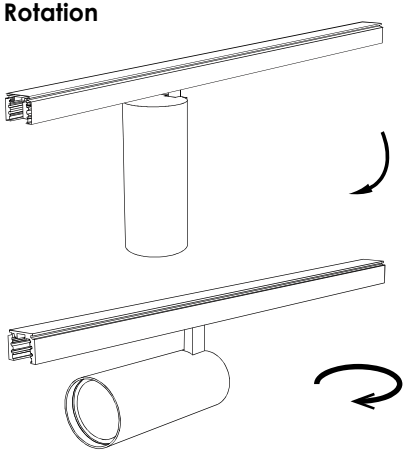


3

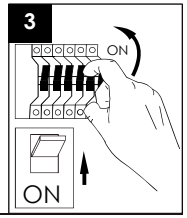

4 **Remove the adapter from the track**

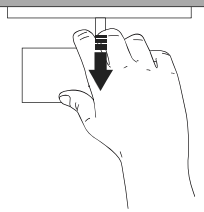

Pull down smoothly from the center of the luminaire. ✓

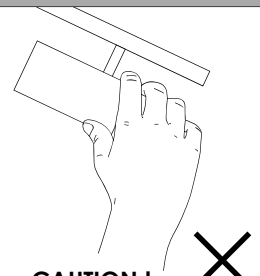

CAUTION ! ✗

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

BRIGHT SPECIAL LIGHTING

Factory
5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece
Tel: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr

GREENLIGHT