
NOTUS 25 LINEAR LED


οδηγίες τοποθέτησης

εσωτερικού χώρου
/ προφίλ


1 Αφαιρέστε το κάλυμμα.

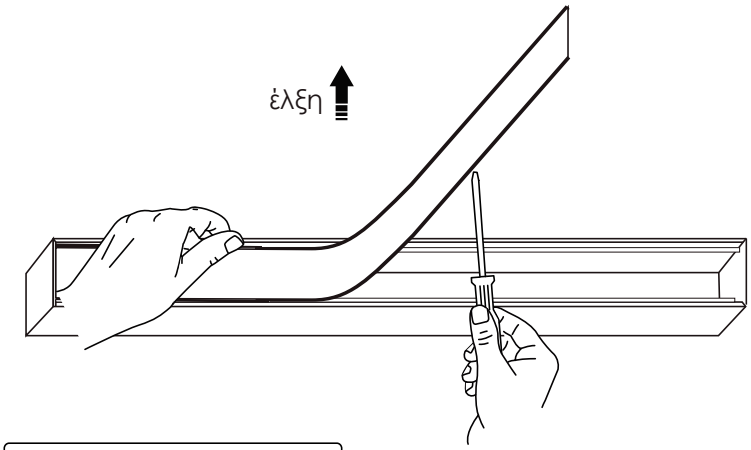


Εργαλεία / εξαρτήματα

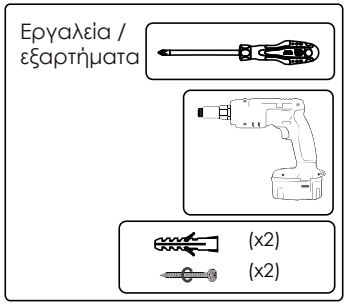

2

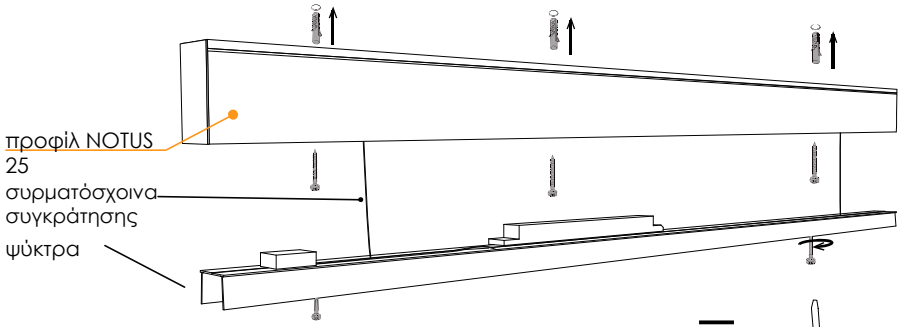


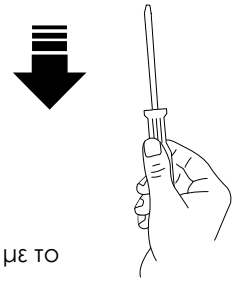

Ξεβιδώστε με κατσαβίδι την ψύκτρα με το γραμμικό LED.

Βιδώστε το προφίλ στην οροφή.

Επανατοποθετήστε την ψύκτρα στο προφίλ.

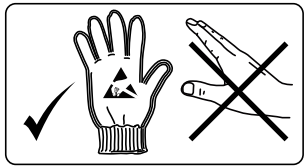

ΠΡΟΣΟΧΗ
Φοράτε αντιστατικά γάντια όταν αγγίζετε τα LED.

ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ

- Η εγκατάσταση πρέπει να γίνεται από αδειούχο ηλεκτρολόγο.
- Εφόσον υπάρχει ακροδέκτης γείωσης, συνδέστε τον στη γείωση της εγκατάστασης.
- Βεβαιωθείτε ότι η παροχή είναι απενεργοποιημένη κατά τη συντήρηση.
- Μετά την εγκατάσταση ελέγξτε τη στερέωση και τη σύσφιξη των στυπιοθλιπτών, όπου υπάρχουν.
- Ο κατασκευαστής δεν ευθύνεται για τραυματισμούς ή ζημιές από λανθασμένη εγκατάσταση ή χρήση.
- Δεν προορίζεται για βρογχοειδή σύνδεση.
- Τα ούπα και οι κλέμες δεν περιλαμβάνονται.
- Τα στοιχεία LED αντικαθίστανται μόνο από τον κατασκευαστή.

IP54

BRIGHT
ΕΙΔΙΚΟΣ ΦΩΤΙΣΜΟΣ

GREENLIGHT


Εργοστάσιο
Κεφαλοβρύσου 5, Μονομάτι, Αχαρνές, Τ.Κ. 13677, Αθήνα, Ελλάδα | Τηλ: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr

NOTUS 25 LINEAR LED ΤΟΠΟΘΕΤΗΣΗ ΔΙΑΧΥΤΗ

οδηγίες τοποθέτησης


ⓔ εσωτερικού χώρου
/ προφίλ

3 Τοποθετήστε τον διαχύτη στο προφίλ.

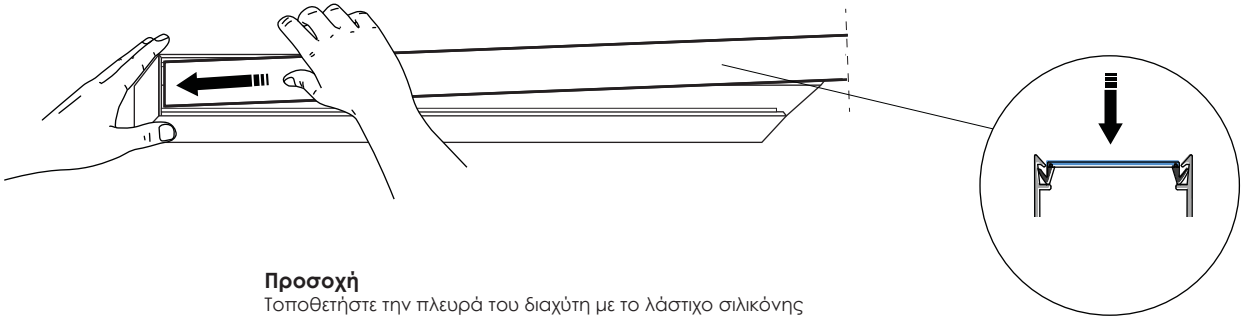

Προσοχή
Τοποθετήστε την πλευρά του διαχύτη με το λάστιχο σιλικόνης μέσα στο προφίλ.

4 Πιέστε τον διαχύτη μέχρι να ασφαλίσει σε όλο το μήκος. Πιέστε με το ένα χέρι και κρατήστε τον σχεδόν κατακόρυφα με το άλλο.

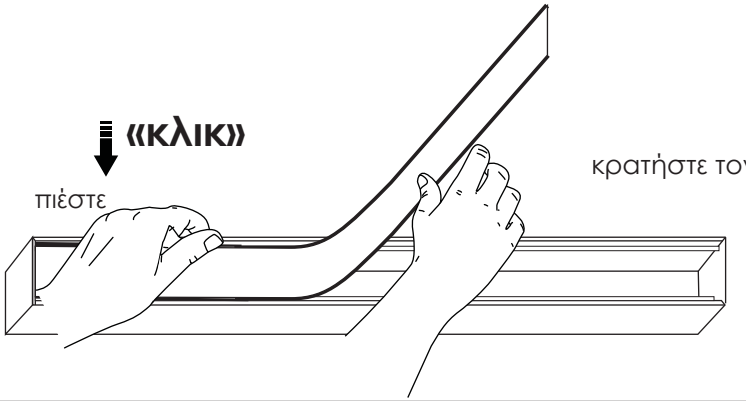

ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ
- Η εγκατάσταση πρέπει να γίνεται από αδειούχο ηλεκτρολόγο.
- Εφόσον υπάρχει ακροδέκτης γείωσης, συνδέστε τον στη γείωση της εγκατάστασης.
- Βεβαιωθείτε ότι η παροχή είναι απενεργοποιημένη κατά τη συντήρηση.
- Μετά την εγκατάσταση ελέγξτε τη στερέωση και τη σύσφιξη των στυπιοθλιπτών, όπου υπάρχουν.
- Ο κατασκευαστής δεν ευθύνεται για τραυματισμούς ή ζημιές από λανθασμένη εγκατάσταση ή χρήση.
- Δεν προορίζεται για βρογχοειδή σύνδεση.
- Τα ούπα και οι κλέμες δεν περιλαμβάνονται.
- Τα στοιχεία LED αντικαθίστανται μόνο από τον κατασκευαστή.

IP54

BRIGHT
ΕΙΔΙΚΟΣ ΦΩΤΙΣΜΟΣ

GREENLIGHT


Εργοστάσιο
Κεφαλοβρύσου 5, Μονομάτι, Αχαρνές, Τ.Κ. 13677, Αθήνα, Ελλάδα | Τηλ: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr


NOTUS 25 LINEAR LED

installation instructions


indoor/ profile

1 Remove the cover.

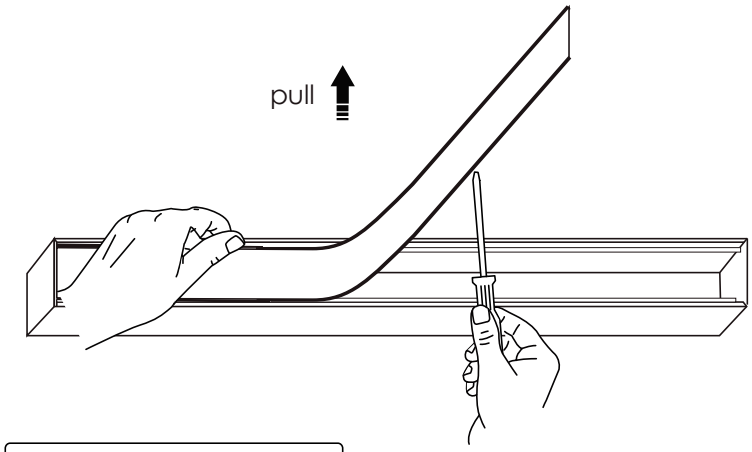

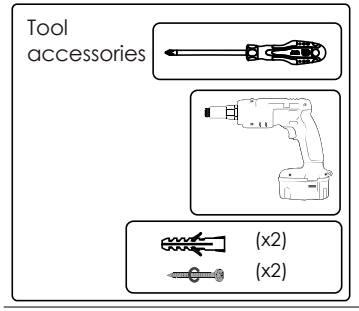


2

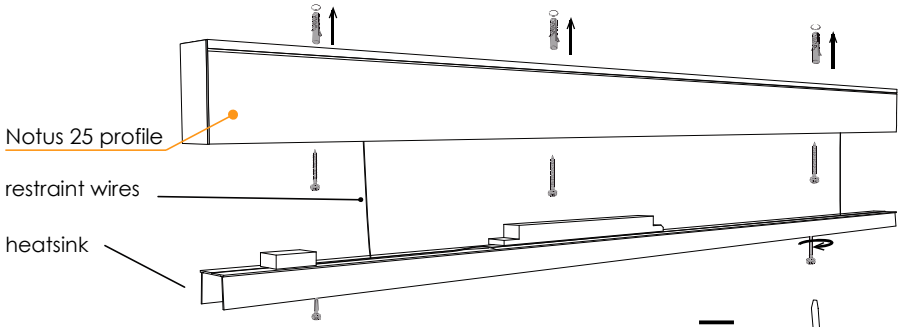

With a screwdriver unscrew the heatsink with the linear LED.

Screw the profile on the ceiling.

Attach back the heatsink into the profile.

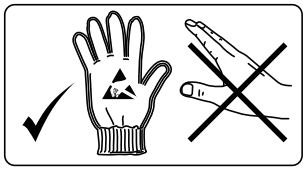

CAUTION
Wear anti-static gloves
before you touch LED systems

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

IP54

BRIGHT SPECIAL LIGHTING

GREENLIGHT


Factory
5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr

NOTUS 25 LINEAR LED DIFFUSER INSTALLATION

installation instructions


indoor/ profile

3 Fit the light diffuser into the profile.

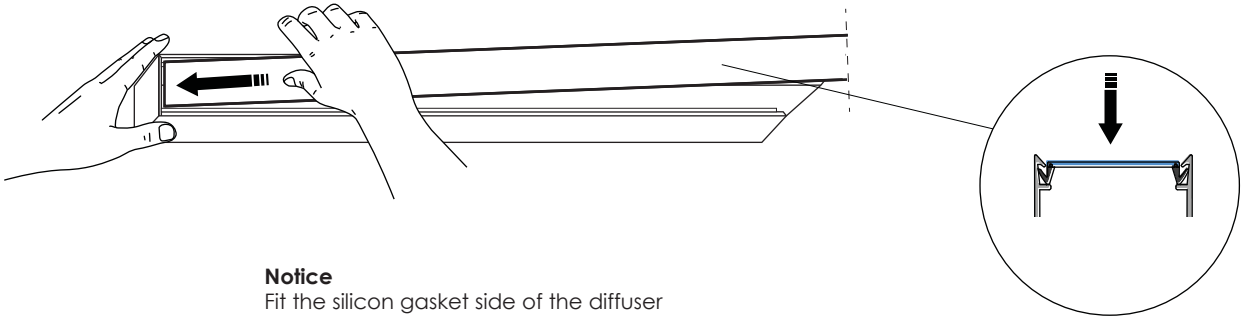

Notice
Fit the silicon gasket side of the diffuser into the profile

4 Push the light diffuser into the profile until it clicks all along the profile. With one hand push the profile and with other one hold it in vertical position.

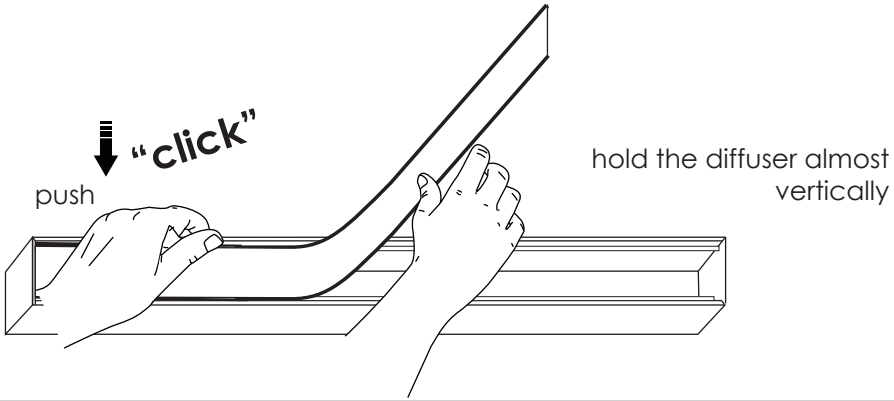

USER INSTRUCTIONS
- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

IP54

BRIGHT SPECIAL LIGHTING

GREENLIGHT

Factory
5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr