PENDO MS P 40


ΔΕΚ 2024

οδηγίες τοποθέτησης

εσωτερικού χώρου / φωτιστικά



1

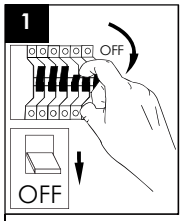


Εγκατάσταση

Κρεμάστε τη βάση στον γάντζο.

Κάντε τις ηλεκτρικές συνδέσεις.

Ρυθμίστε το μήκος του συρματόσχοινου ανάρτησης.

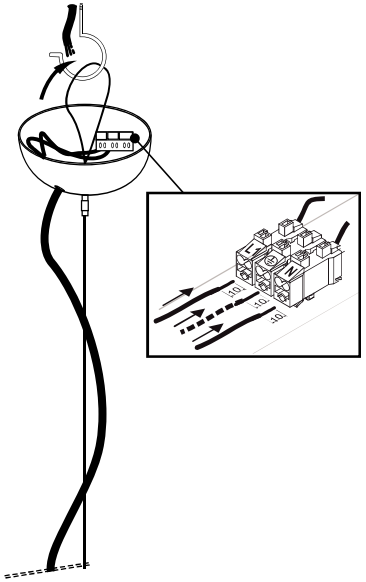




πιέστε

ρύθμιση μήκους συρματόσχοινου

2 **Τοποθέτηση / αντικατάσταση λαμπτήρα**


Επανατοποθετήστε τον λαμπτήρα.

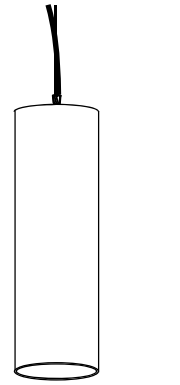





3

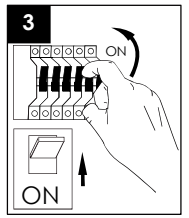

ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ

- Η εγκατάσταση πρέπει να γίνεται από αδειούχο ηλεκτρολόγο.
- Εφόσον υπάρχει ακροδέκτης γείωσης, συνδέστε τον στη γείωση της εγκατάστασης.
- Βεβαιωθείτε ότι η παροχή είναι απενεργοποιημένη κατά τη συντήρηση.
- Η ισχύς των λαμπτήρων δεν πρέπει να υπερβαίνει την ένδειξη στο φωτιστικό ή στη συσκευασία.
- Μετά την εγκατάσταση ελέγξτε τη στερέωση και τη σύσφιξη των στυπιοθλιπτών, όπου υπάρχουν.
- Ο κατασκευαστής δεν ευθύνεται για τραυματισμούς ή ζημιές από λανθασμένη εγκατάσταση ή χρήση.
- Δεν προορίζεται για βρογχοειδή σύνδεση.
- Τα ούπα και οι κλέμες δεν περιλαμβάνονται.
- Τα στοιχεία LED αντικαθίστανται μόνο από τον κατασκευαστή.

BRIGHT ΕΙΔΙΚΟΣ ΦΩΤΙΣΜΟΣ

Εργοστάσιο

Κεφαλοβρύσου 5, Μονομάτι, Αχαρνές, Τ.Κ. 13677, Αθήνα, Ελλάδα Τηλ: (+30) 210 6208 230 |
E-mail: info@bright.gr | www.bright.gr

GREENLIGHT

PENDO MS P 40


DEC 2024

installation instructions

indoor / interior lighting



1

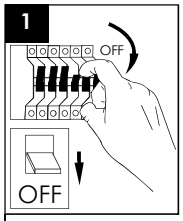



Installation

Hang the base on the hook.

Make wiring connections.


Adjust the length of the suspension wire

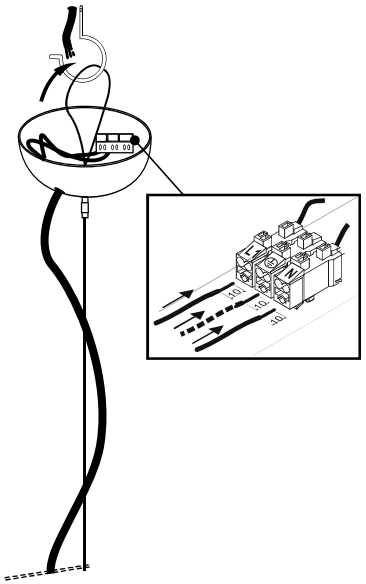

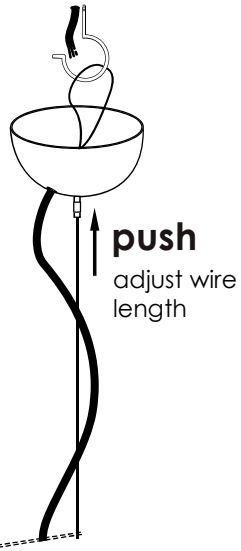


2 **Lamp placement/replacement**

Place the lamp back to the fixture.

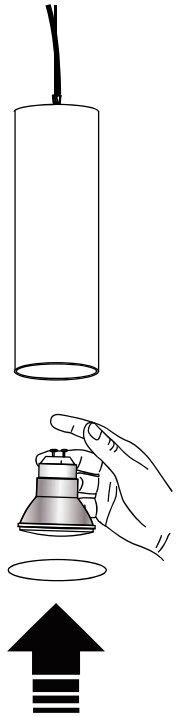

3

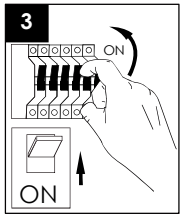

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

BRIGHT SPECIAL LIGHTING

Factory
5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece
Tel: (+30) 210 6208 230 | E-mail: info@bright.gr | www.bright.gr

GREENLIGHT