STATUR SMALL


IAN 2020

οδηγίες τοποθέτησης


εσωτερικού χώρου / χωνευτά σποτ




1

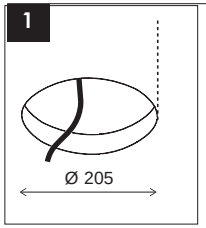


Εγκατάσταση Ανοίξτε οπή στην οροφή.

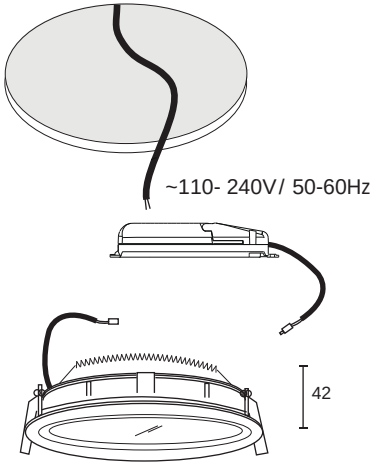


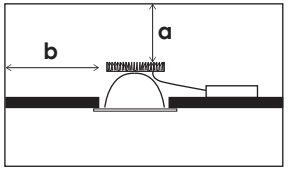


	≤ 25W	> 25W
a	25mm	40mm
b	100mm	150mm

2 Κάντε την ηλεκτρική σύνδεση.

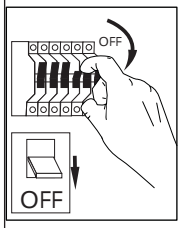

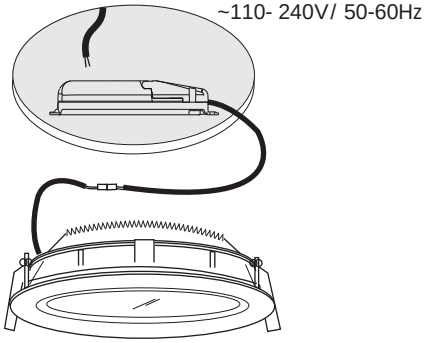

3 Λυγίστε τα ελατήρια για να τοποθετήσετε το φωτιστικό στην ψευδοροφή.

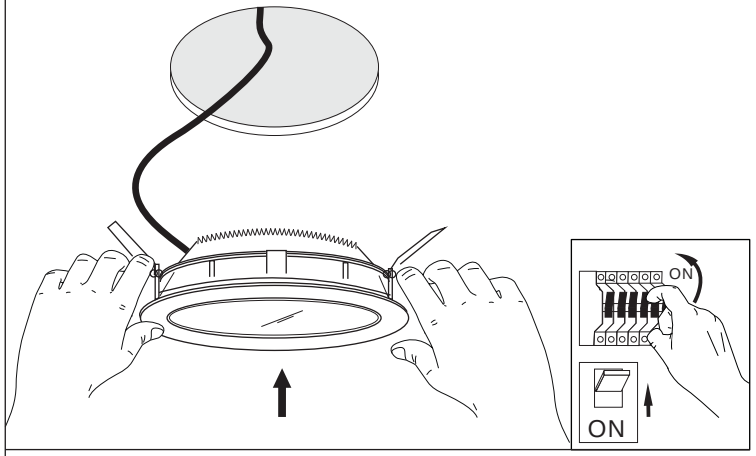




ΠΡΟΣΟΧΗ
Αντικαταστήστε τυχόν ραγισμένο γυαλί.

ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ

- Η εγκατάσταση πρέπει να γίνεται από αδειούχο ηλεκτρολόγο.
- Εφόσον υπάρχει ακροδέκτης γείωσης, συνδέστε τον στη γείωση της εγκατάστασης.
- Βεβαιωθείτε ότι η παροχή είναι απενεργοποιημένη κατά τη συντήρηση.
- Η ισχύς των λαμπτήρων δεν πρέπει να υπερβαίνει την ένδειξη στο φωτιστικό ή στη συσκευασία.
- Μετά την εγκατάσταση ελέγξτε τη στερέωση και τη σύσφιξη των στυπιοθλιπτών, όπου υπάρχουν.
- Ο κατασκευαστής δεν ευθύνεται για τραυματισμούς ή ζημιές από λανθασμένη εγκατάσταση ή χρήση.
- Δεν προορίζεται για βρογχοειδή σύνδεση.
- Τα ούπα και οι κλέμες δεν περιλαμβάνονται.
- Τα στοιχεία LED αντικαθίστανται μόνο από τον κατασκευαστή.

ΠΡΟΣΟΧΗ

Φοράτε αντιστατικά γάντια πριν αγγίξετε τα συστήματα LED.

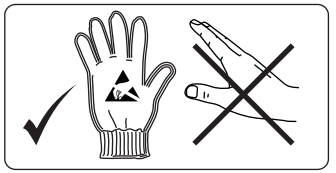

BRIGHT
ΕΙΔΙΚΟΣ ΦΩΤΙΣΜΟΣ

Εργοστάσιο
Κεφαλοβρύσου 5, Μονομάτι, Αχαρνές, Τ.Κ. 13677, Αθήνα, Ελλάδα |Τηλ: (+30) 210 6208 230 E-mail: info@bright.gr | www.bright.gr

IP54

GREENLIGHT


STATUR SMALL

JAN 2020


installation instructions


indoor/ downlight recessed spots

1

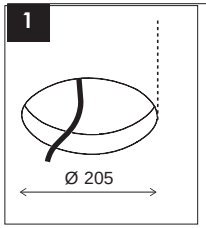


Installation Cut hole on ceiling

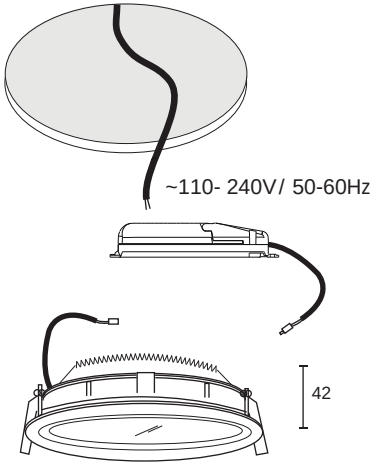


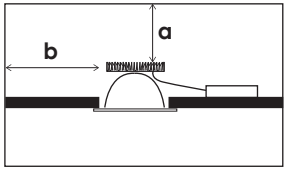


	≤ 25W	> 25W
a	25mm	40mm
b	100mm	150mm

2 Make wiring connection

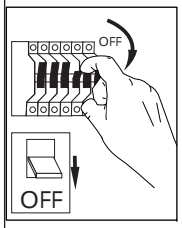

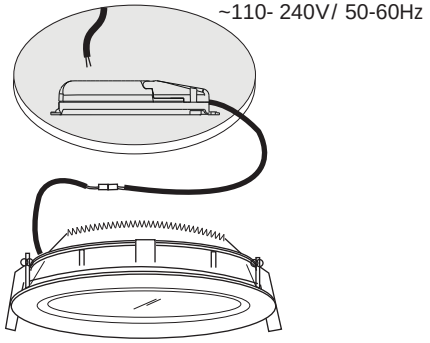

3 Bend the springs to insert fitting in the false ceiling

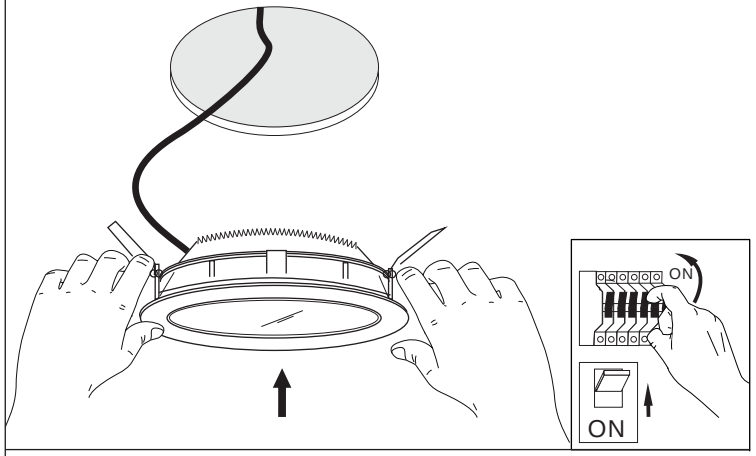




CAUTION
Replace any cracked shield

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

CAUTION

Wear anti-static gloves
before you touch LED systems

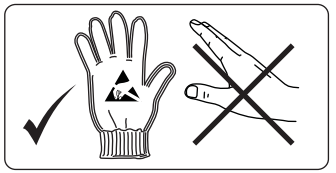

BRIGHT SPECIAL LIGHTING

Factory
5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230
E-mail: info@bright.gr | www.bright.gr

IP54

GREENLIGHT