

VATES 23 SSLED

⊖ indoor/ downlights



1

min 150

79 X 79

OFF

OFF

Use driver

Tool accessories

Installation

Cut the ceiling

79x79mm

Remove the shade

2 Remove the inner shade and source.

3 Adjust the false ceiling brackets and then fit the fixture in the ceiling.

4 Screw the fixture on ceiling
Hold the luminaire while using the drill.

5 Grouting. Paint the false ceiling

6 Make wiring connection

INPUT
~220- 240V

"CLICK"

7 Fit the shade

"CLICK"

8

ON

ON


Rotation :
Vertical 30° |
Horizontal 355°

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

CAUTION

Wear anti-static gloves before you touch LED systems

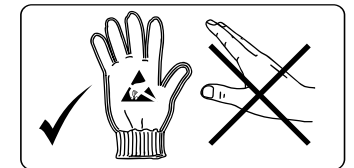

Factory

5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230
E-mail: info@bright.gr | www.bright.gr